

## Instruction to assembly **easytec™** boatcover



Put the short S-hook in the front/bow, preferably hook on cleats or pulpit and the long S-hook on back/stern of the boat. The S-hooks can also be extended by using the supplied S-splice.




Put the blue pipes together in full length and try out the arc/bow from S-hook to S-hook so the height is at least 1,5m (60 inches) over deck or 0,5m (20 inches) over roof/high objects.



Unfold the tarpaulin and push in the pipes in the sleeve in the middle.



Lift pipes and tarpaulin up on the deck and apply the pipe ends on S-hooks. A bow/arc is now along the boat and standing without support.

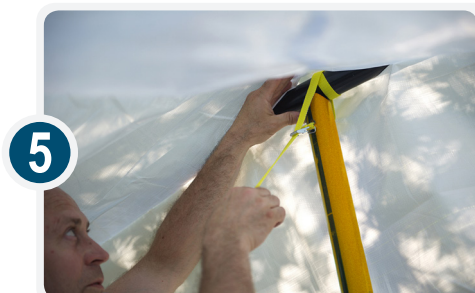

Apply the support-bars where there are openings in the tarpaulin (phase out end towards the blue pipes, use straps with two turns around blue pipe). Use the other strap to fix the bottom of the support-bar to something on boat so it is steady. Common is to set two support-bars together in A-formation.



Finish fastening the eyelets of the tarpaulin with the supplied ropes.